


AVR Synth Panel wiring diagram

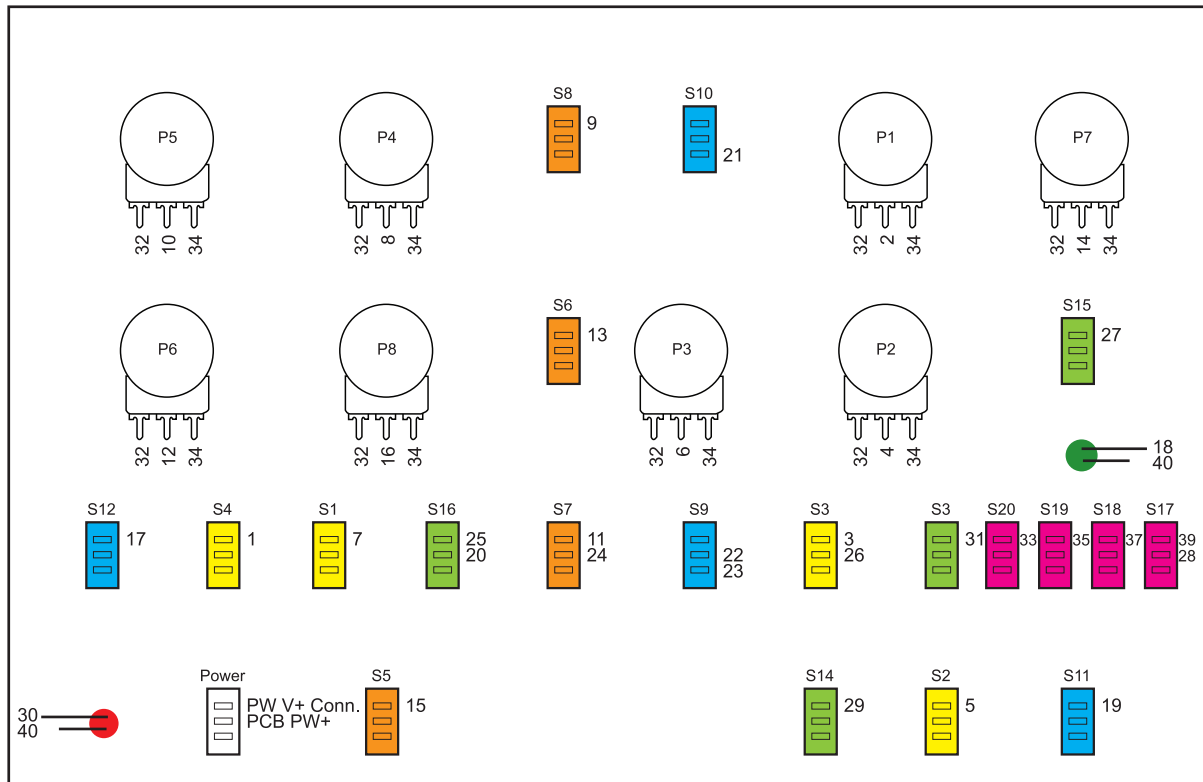

1. Connect center pins of each colour-coded switch group together.
2. Connect all left pins of the all potentiometers together. Do the same with the right pins.
3. Connect the cathodes os the LEDs together
4. Carefully strip and divide up to 20-30 cm of each lead of the 40-lead bus wire.
Leads 36 and 38 are unused.
5. Leave enough amount of remaining wire to make sure that you cn easily open device in the future without need to disconnect any header.